OWNER'S MANUAL

slick®

MP3 Docking Alarm Clock Radio

Model CR312

FCC and telephone company information

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Rating plate and caution marking are marked on the bottom enclosure of the apparatus.

CAUTION: When using this product, there are basic safety instructions that should always be followed. Refer to the the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

Important safety instructions

* Some of the below precautions may not apply to your product, e.g.: Battery and power cord precautions.

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink or swimming pool).
5. Do not place this product on an unstable surface.
6. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
7. Never push objects of any kind into the ventilation slots of this product as they may touch dangerous voltage points or create a short circuit that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
8. Use only the power cord and batteries indicated in this manual.
9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
10. Plug the adaptor to the socket - outlet that is closest to the equipment and which is easily accessible.
11. Do not allow anything to rest on the power cord. Do not install this product where the cord may have anyone walking on it.
12. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
13. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
14. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.
15. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
    A. When the power supply cord or plug is damaged or frayed.
    B. If liquid has been spilled onto the product.
    C. If the product has been exposed to rain or water.
    D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
    E. If the product has been dropped and damaged.
    F. If the product exhibits a distinct change in performance.
16. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
17. Do not use the telephone to report a gas leak in the vicinity of the leak.
18. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

For products that require batteries

Important Battery Precautions

- Use only the type of battery specified in this user manual
- Batteries may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged.
- Do not dispose of the battery(ies) in a fire. They may explode. Check with local codes for disposal instructions.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing different types of batteries or inserting them incorrectly, may cause them to leak.
- Discard any leaky or deformed battery immediately. Leakage from battery acid can cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

SAVE THESE INSTRUCTIONS

Before you begin

Powering up

Plug the AC power cord into a 120V, 60Hz electrical outlet. The clock display will light up and flash indicating the power is on.

NOTE: This cord is polarized. This means the cord will only fit one way into the socket or wall outlet. If it does not fit, do not force it, just reverse it and try again.

Installing the back-up battery

1. Remove the battery compartment door (located at the bottom of the radio).
2. Insert a 9-volt battery (not included).
3. Replace the compartment door.

Location of controls

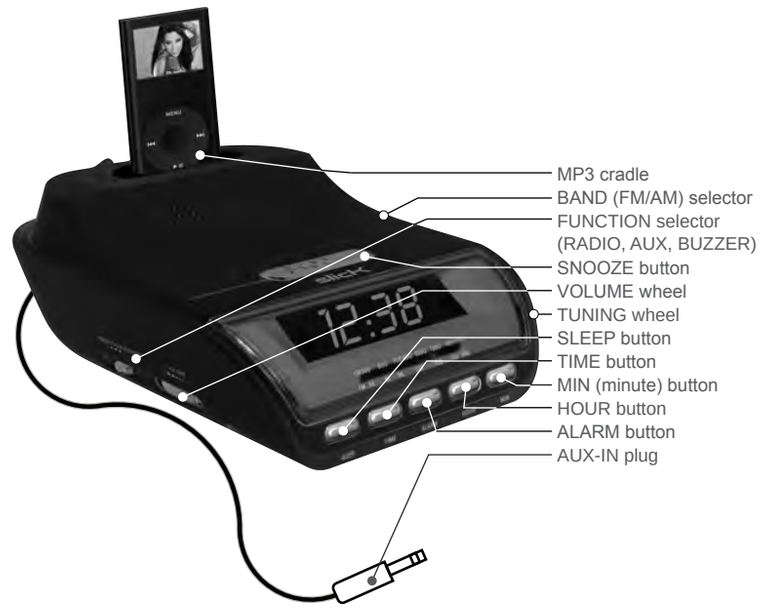

Setting the clock

1. Press the **[TIME]** button together with the **[HOUR]** button until the display shows the desired hour.
2. Press the **[TIME]** button together with the **[MIN]** button until the display shows the desired minute.

NOTE: When the PM indicator is off, the time is AM.

Setting the alarm time

1. Set the function selector to the **[BUZZER]** position.
2. Press the **[ALARM]** button together with the **[HOUR]** button until the display shows the desired hour.

NOTE: When the PM indicator is off, the time is AM.

3. Press the **[ALARM]** button together with the **[MIN]** button until the display shows the desired minute.
4. On the display, the alarm on indicator will light (Figure 1).

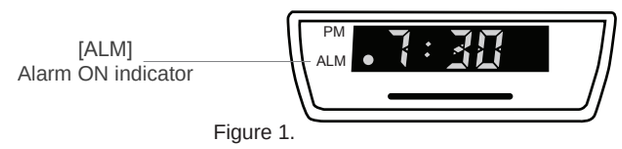

Figure 1.

5. To check the alarm time, press the **[ALARM]** button.

Wake up function

1. Wake up to RADIO

- Set the function selector to the **[BUZZER]** position.
- Turn the **[VOLUME]** wheel left; make sure the volume is set at the desired level.

2. Wake up to BUZZER

- Set the function selector to the **[BUZZER]** position.
- Turn the **[VOLUME]** wheel right until you hear a click (volume off position).

3. Wake up to iPod

- Set the function selector to the **[AUX]** position.
- Turn the **[VOLUME]** wheel left; make sure the volume is set at the desired level.
- Set the alarm setting of your iPod (not supported on all models) to the desired time you would like to wake up.

Snooze function

The radio and alarm can be paused for 9 minutes by pressing the **[SNOOZE]** button. After 9 minutes, the radio and alarm will activate again.

Shutting/resetting the alarm

1. To reset the alarm, press the **[ALARM]** button during alarm operation. The alarm will shut for that day only, and will wake you up the next day at the same time (the alarm on indicator will still be lit).
2. To shut the alarm, set the function selector to **[AUX]** or **[RADIO]** and turn the **[VOLUME]** wheel right until you hear a click (volume off position).

Sleep function

The SLEEP function will allow the radio to play 59 minutes (or 1 hour and and 59 minutes) before the radio turns itself off. Follow the steps below to set the sleep function:

1. Set the function selector to the **[BUZZER]** position.
2. Turn the **[VOLUME]** wheel left to the desired level.
3. Press the **[SLEEP]** button, the display will show 59 minutes and the radio will start to play.
4. Pres the **[SLEEP]** button together with the **[HOUR]** button to start the count down at 1 hour and 59 minutes.

NOTE: Press the **[SLEEP]** button again to restart at 59 minutes.

5. Press the **[SLEEP]** button together with the **[MIN]** button until the display shows the desired amount of time you want the radio to play before shutting itself off.
6. To turn the radio off before the playing time has expired, simply press the **[SNOOZE]** button.

NOTE: The sleep function will not affect the wake-up operation of the clock.

Listnening to the radio

1. Set the function selector to the **[RADIO]** position.
2. Set the **[BAND]** selector to either the FM or AM position.
3. Turn the **[VOLUME]** wheel left to turn on the radio and adjust the volume.
4. Turn the **[TUNING]** wheel to select your desired station.

NOTE: For best FM reception, position the FM aerial antenna located on the rear side of your unit so that the best reception is received. The unit has a built-in ferrite aerial antenna for AM signal, move or rotate your unit to obtain the best reception.

Listnening to mp3 players

To listen to music from you mp3 player follow the steps below:

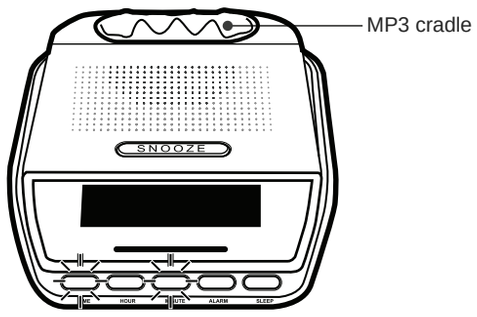

Figure 2.

1. Place the mp3 player between the rubber flaps of the mp3 cradle. (Figure 2)

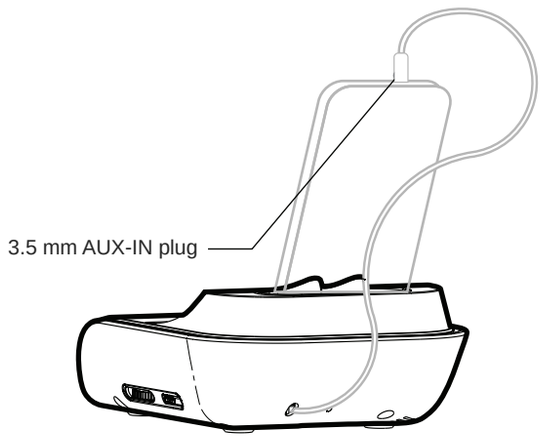

Figure 3.

2. Connect the built-in 3.5 mm **[AUX-IN]** plug to your mp3 player's headset jack. (Figure 3)
3. Set the function selector to the **[AUX]** position.
4. Turn the **[VOLUME]** wheel left to the desired level.

Product maintenance

Follow the guidelines below to properly maintain this product:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example: motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the unit and/or other rough treatment.
- Clean with a soft cloth
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship it at a later date.

Warranty information

90 Day Limited Warranty

In the unlikely event that this product is defective, or does not perform properly , you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- **Provide proof of the date of purchase within the package (Dated bill of sale).**
- **Prepay all shipping costs to the authorized service center, and remember to insure your return.**
- **Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.**
- **Describe the defect or reason you are returning the product.**

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department, email at cs@slickusa.com.
To obtain service after the warranty period, please email cs@slickusa.com with product information,date of purchase and nature of the problem. Customer service will reply to the email with service instructions.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

www.slickusa.com
Manufactured by Southern Telecom Inc. Brooklyn NY. 11232
Slick is a registered trademark of Southern Telecom Inc.
Brooklyn, NY USA
© 2008 Southern Telecom Inc. All rights reserved.
iPod is a trademark of Apple Inc., registered in the USA and other countries
This product is not designed, manufactured, endorsed, or licensed by Apple Inc.